


T=0.500"
 Drill bushing holes thru (4 per).
 Drill screw holes 0.196 x 0.625 deep (4 per),
 Do not drill screw holes thru

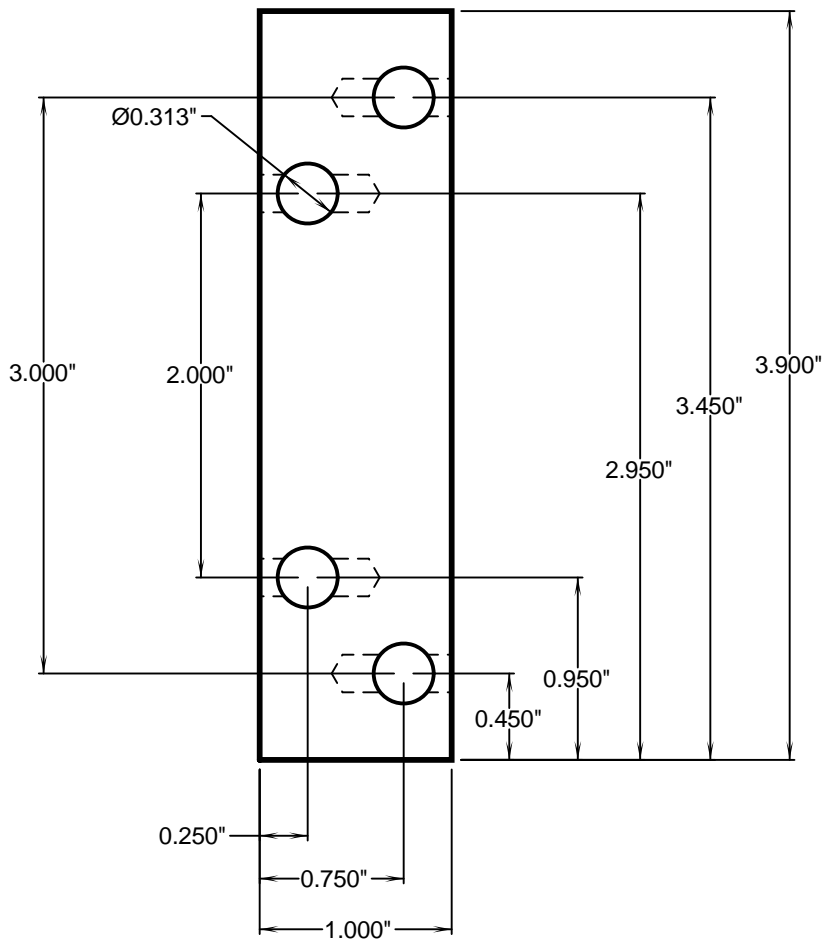

GR 716-C Insulators
 Use polypropylene or similar material with
 high insulation resistance and low dielectric constant.
 2 each required.

